

At the end of the tape, the tape player will stop automatically and the **PLAY BUTTON** (7) will pop out. Open the cassette door (3) and remove the cassette tape from the tape compartment.


IMPORTANT:

To prevent unnecessary battery wear, always press the **STOP BUTTON** (9) and remove the tape from the cassette compartment when listening is completed.

E. BASS BOOST

1. By setting the Bass Boost switch to the 'OFF' position, the frequency response becomes flat.
2. Set the Bass Boost switch to the 'ON' position to emphasize the bass sound.

STEREO CASSETTE PLAYER

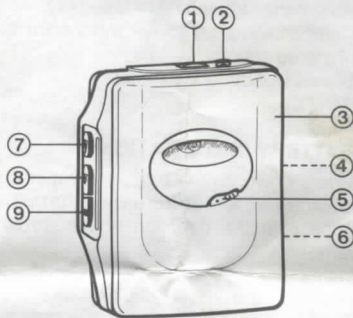

A. LOCATION OF CONTROLS

1. Volume Control
2. Headphone Jack
3. Cassette Door
4. Belt Clip
5. Bass Boost Switch
6. Battery Compartment Cover
7. Play Button
8. Fast Forward Button
9. Stop Button

B. FEATURES

- Stereo Cassette Tape Player.
- Automatic stop at end of tape play.
- Compact size and light weight for enjoyment of stereo sound.
- Stereo Headphones included.
- Belt Clip.


C. BATTERY INSTALLATION

1. Press down on the battery compartment cover (6) located on the back of the unit and push it in the direction of the arrow to remove it.

2. Install two 1.5V 'AA' size/UM-3 batteries, observing the proper polarity (+ and -). See Fig 1.

Note: If the batteries are not inserted correctly, the unit will not work.

3. Replace the battery compartment cover (6).

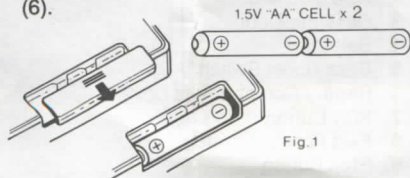

CAUTION:

To prevent damage due to battery acid corrosion, batteries should be checked periodically and replaced as required.

REPLACE OR REMOVE BATTERIES IF:

- a. There is evidence of leakage or corrosion.
- b. The unit is to be stored for extended periods of time.

D. TAPE LISTENING

1. Connect the stereo headphone to the HEADPHONE JACK (2).
2. Open the cassette door (3).
3. Insert a pre-recorded cassette tape into the slots on the cassette door (3) with the exposed tape facing up and the full reel on the right. Close the cassette door (3) gently.
4. Press the PLAY BUTTON (7). Tape playback will begin.
5. Adjust the VOLUME CONTROL (1) to the desired listening level.
6. Press the FAST FORWARD BUTTON (8) to advance the tape rapidly.
7. Press the STOP BUTTON (9) to stop the tape playback.